


EAP-SIM Manual Configuration Guide for Android 4.x



1 Connect to Wireless@SGx via EAP-SIM


a) Select Wi-Fi from settings menu

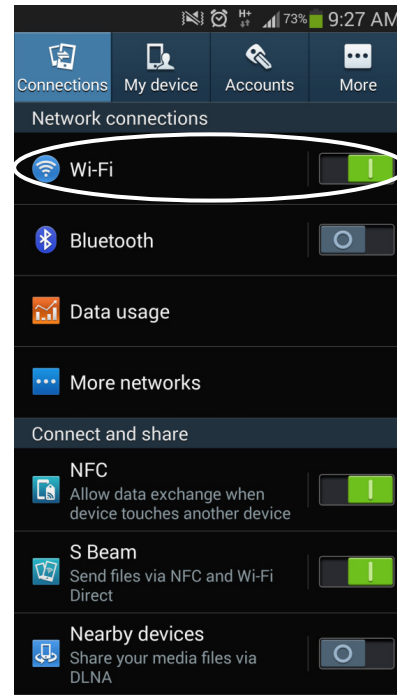

b) Press and hold the “Wireless@SGx” SSID, then select “Modify network config”.



- c) Select EAP method as follows and click **"Save"**
- **EAP Type: SIM**

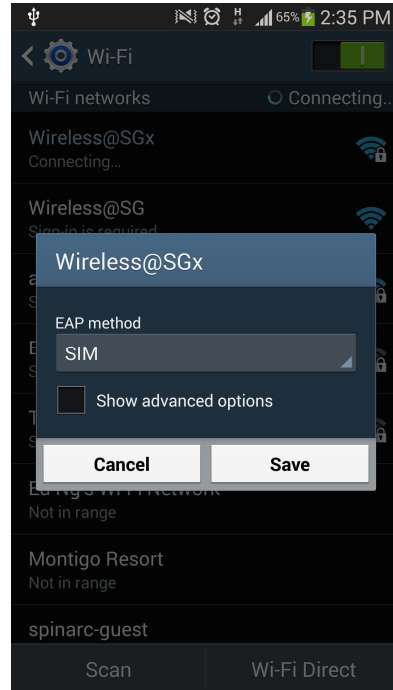

2 Uninstall EAP-SIM profile

Follow the steps below to remove the configuration:

- Press **HOME** → **MENU** → **Setting** → **Wi-Fi**
- Search for **Wireless@SGx** profile in the list of Wi-Fi networks
- Press and Hold on the **Wireless@SGx** profile
- Confirm the removal of your profile by tapping the **"Forget"** option in the popup window